



# DVD PLAYER

## OWNER'S MANUAL

MODEL : DVD5253



**MP3**



Before connecting, operating or adjusting this product,  
please read this instruction booklet carefully and completely.

FOR THE GUARANTEE TERMS & CONDITIONS,  
PLEASE REFER TO BACK COVER OF THIS MANUAL.

## Safety Precautions



**WARNING**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN



**WARNING:** TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation mark within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

**WARNING:** TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

CLASS 1 LASER PRODUCT  
KLASSE 1 LASER PRODUKT  
LUOKAN 1 LASER LAITE  
KLASS 1 LASER APPARAT  
CLASSE 1 PRODUIT LASER

### CAUTION:

This Digital Video Disc Player employs a Laser System.

To ensure proper use of this product, please read this owner's manual carefully and retain for future reference, should the unit require maintenance, contact an authorized service location-see service procedure.

Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure.

To prevent direct exposure to laser beam, do not try to open the enclosure. Visible laser radiation when open. DO NOT STARE INTO BEAM.

**CAUTION:** The apparatus shall not be exposed to water dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.



This product is manufactured to comply with the radio interference requirements of EEC DIRECTIVE 89/336/EEC, 93/68/EEC and 73/23/EEC.

**POWER:** This DVD player operates on a mains supply of 110-240V~, 50/60Hz.

**WIRING:** This DVD player is supplied with a BSI 1363 approved 13 amp mains plug, fused at 5 amp. When replacing the fuse always use a 5 amp BS 1362, BSI or ASTA approved type. Never use this plug with the fuse cover omitted. To obtain a replacement fuse cover contact your dealer or "LG Electronics U.K.Ltd." If the type of plug supplied is not suitable for the mains sockets in your home, then the plug should be removed and a suitable type fitted. Please refer to the wiring instructions below:

**WARNING:** A mains plug removed from the mains lead of this DVD player must be destroyed. A mains plug with bared wires is hazardous if inserted in a mains socket.

Do not connect either wire to the earth pin, marked with the letter E or with the earth symbol  $\perp$  or coloured green or green and yellow.

If any other plug is fitted, use a 5 amp fuse, either in the plug, or at the distribution board.

**IMPORTANT:** The wires in this mains lead are coloured in accordance with the following codes:

- **BLUE: NEUTRAL, BROWN: LIVE** - As the colours of the wires in the mains lead of this DVD player may not correspond with the coloured marking identifying the terminals in your plug, proceed as follows: The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.



### Notes on copyrights:

It is forbidden by law to copy, broadcast, show, broadcast via cable, play in public, or rent copyright material without permission.

This product features the copy protection function developed by Macrovision. Copy protection signals are recorded on some discs. When recording and playing the pictures of these discs on a VCR, the picture noise will appear.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

**SERIAL NUMBER:** The serial number is found on the back of this unit. This number is unique to this unit and not available to others. You should record requested information here and retain this guide as a permanent record of your purchase.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

# Contents

## Introduction

<b>Safety Precautions</b> .....	2
<b>Table of Contents</b> .....	3
<b>Before Use</b> .....	4-5
Playable Disc .....	4
Precautions .....	5
Notes on Discs .....	5
About Symbols .....	5
<b>Front Panel and Display Window</b> .....	6
<b>Remote Control</b> .....	7
<b>Rear Panel</b> .....	8

## Preparation

<b>Connections</b> .....	9-10
Connecting to a TV .....	9
Connecting to Optional Equipment .....	10
<b>Before Operation</b> .....	11
Controlling the TV .....	11
General Explanation .....	11
On-Screen Display .....	11
Initial Settings .....	12-14
• <i>Using your DVD player very first time.</i> .....	12
• <i>Initial Settings General Operation.</i> .....	12
• <i>Language</i> .....	12
• <i>Picture.</i> .....	12
• <i>Sound</i> .....	13
• <i>Others (DRC/Vocal).</i> .....	13
• <i>Parental Control.</i> .....	14

## Operation

<b>Operation with DVD</b> .....	15-16
Playing a DVD .....	15
General Features .....	15
• <i>Moving to another TITLE.</i> .....	15
• <i>Moving to another CHAPTER</i> .....	15
• <i>Slow Motion.</i> .....	15
• <i>Still Picture and Frame-by-Frame Playback</i> .....	16
• <i>Search.</i> .....	16
• <i>Random</i> .....	16
• <i>Repeat</i> .....	16
• <i>Repeat A-B</i> .....	16
• <i>Time Search</i> .....	16
• <i>Zoom.</i> .....	16
• <i>3D Surround</i> .....	17
• <i>Marker Search.</i> .....	17
Special DVD Features .....	17
• <i>Title Menu</i> .....	17
• <i>Disc Menu</i> .....	17
• <i>Camera Angle</i> .....	17
• <i>Changing the Audio Language.</i> .....	17
• <i>Subtitles</i> .....	17

<b>Operation with Audio CD and MP3 Disc</b> .....	18
Playing an Audio CD and MP3 Disc .....	18
• <i>Pause</i> .....	18
• <i>Moving to another Track</i> .....	18
• <i>Repeat Track/All/Off.</i> .....	18
• <i>Search.</i> .....	18
• <i>Random</i> .....	18
• <i>Repeat A-B</i> .....	18
• <i>3D Surround</i> .....	18
• <i>Changing the Audio Channel</i> .....	18
<b>Programmed Playback</b> .....	19
Programmed Playback with Audio CD and MP3 Disc .....	19
• <i>Repeat Programmed Tracks</i> .....	19
• <i>Erasing a Track from Program List.</i> .....	19
• <i>Erasing the Complete Program List</i> .....	19
<b>Additional Information</b> .....	20
Last Condition Memory .....	20
Screen Saver .....	20
Video Mode Setting .....	20
Notes on MP3 Discs .....	20

## Reference

<b>Troubleshooting</b> .....	21
<b>Language Code List</b> .....	22
<b>Country Code List</b> .....	23
<b>Specification</b> .....	24

## About the symbols for instructions



Indicates hazards likely to cause harm to the unit itself or other material damage.





Indicates special operating features of this unit.



Indicates tips and hints for making the task easier.

## Before Use

### Playable Discs

	DVD (8 cm / 12 cm disc)
	Audio CD (8 cm / 12 cm disc)

In addition, this unit can play a CD-R or CD-RW that contains audio titles or MP3 files.

#### Notes

- Depending on the conditions of the recording equipment or the CD-R/RW disc itself, some CD-R/RW discs cannot be played on the unit.
- The unit cannot play the CD-R/RW discs that contain no data, or contain different kinds of formatted data other than MP3 and CD-DA data.
- Do not attach any seal or label to either side (the labeled side or the recorded side) of a disc.
- Do not use irregular shaped CDs (e.g., heart-shaped or octagonal). It may result in malfunctions.

#### Notes on DVDs

Some playback operations of DVDs may be intentionally fixed by software manufacturers. As this unit plays DVDs according to disc content designed by the software manufacturer, some playback features of the unit may not be available, or other functions may be added. Refer also to the instructions supplied with the DVDs. Some DVDs made for business purposes may not be played on the unit.

#### Regional code of the DVD player and DVDs

This DVD player is designed and manufactured for playback of region “2” encoded DVD software. The region code on the labels of some DVD discs indicates which type of player can play those discs. This unit can play only DVD discs labeled “2” or “ALL”. If you try to play any other discs, the message “Check Regional Code” will appear on the TV screen. Some DVD discs may not have a region code label even though their playback is prohibited by area limits.



#### Note on DTS-encoded CDs

To avoid possible damage to the audio system, turn down the volume before playing back such discs, adjust the volume gradually, and keep the volume level low. To enjoy DTS Digital Surround™ playback, an external 5.1 channel DTS Digital Surround™ decoder system must be connected to the digital output of the unit.

### Disc-related terms

#### Title (DVD only)

The main film content or accompanying feature content or additional feature content, or music album. Each title is assigned a title reference number enabling you to locate it easily.

#### Chapter (DVD only)

Sections of a picture or a musical piece that are smaller than titles.

A title is composed of one or several chapters. Each chapter is assigned a chapter number, enabling you to locate the chapter you want. Depending on the disc, no chapters may be recorded.

#### Track (Audio CD only)

Sections of a picture or a musical piece on an audio CD. Each track is assigned a track number, enabling you to locate the track you want.

## Before Use (Cont'd)

### Precautions

#### Handling the unit

##### When shipping the unit

The original shipping carton and packing materials come in handy. For maximum protection, re-pack the unit as it was originally packed at the factory.

##### When setting the unit

The picture and sound of a nearby TV, VCR, or radio may be distorted during playback. In this case, position the unit away from the TV, VCR, or radio, or turn off the unit after removing the disc.

##### To keep the surface clean

Do not use volatile liquids, such as insecticide spray, near the unit. Do not leave rubber or plastic products in contact with the unit for a long period of time. They will leave marks on the surface.

#### Cleaning the unit

##### To clean the cabinet

Use a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth lightly moistened with a mild detergent solution. Do not use strong solvents, such as alcohol, benzene, or thinner, as these might damage the surface of the unit.

##### To obtain a clear picture

The DVD player is a high-tech, precision device. If the optical pick-up lens and disc drive parts are dirty or worn down, the picture quality will be poor. Regular inspection and maintenance are recommended after every 1,000 hours of use. (This depends on the operating environment.)

For details, please contact your nearest dealer.

### Notes on Discs

#### Handling discs

Do not touch the playback side of the disc.  
Hold the disc by the edges so that fingerprints will not get on the surface.  
Do not stick paper or tape on the disc.

 


#### Storing discs

After playing, store the disc in its case. Do not expose the disc to direct sunlight or sources of heat, or leave it in a parked car exposed to direct sunlight, as there may be a considerable temperature increase inside the car.

#### Cleaning discs


Fingerprints and dust on the disc can cause poor picture quality and sound distortion. Before playing, clean the disc with a clean cloth. Wipe the disc from the center out.

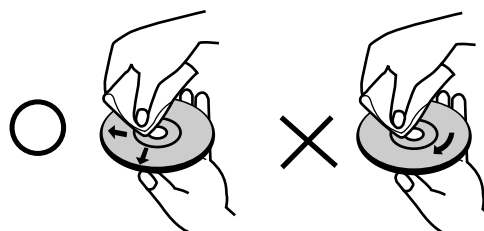

Do not use strong solvents such as alcohol, benzene, thinner, commercially available cleaners, or anti-static spray intended for older vinyl.




### About Symbols

#### About the symbol display

 
 
" " may appear on the TV screen during operation. This icon means the function explained in this owner's manual is not available on that specific DVD video disc.

#### About the disc symbols for instructions

A section whose title has one of the following symbol is applicable only to the disc represented by the symbol.

-  DVD
-  Audio CDs.
-  MP3 disc.

## Front Panel and Display Window

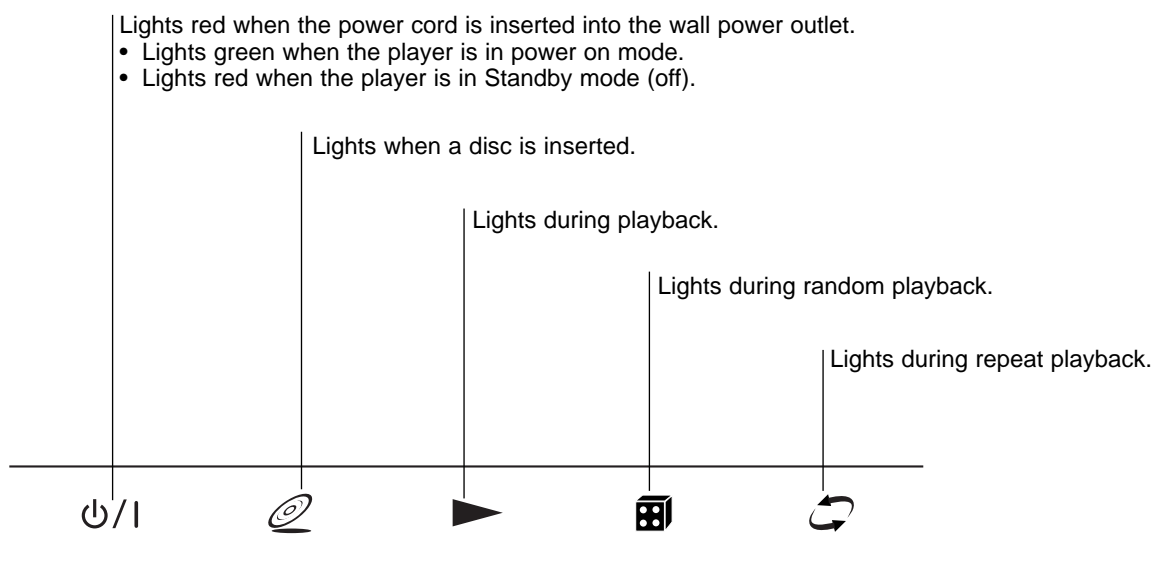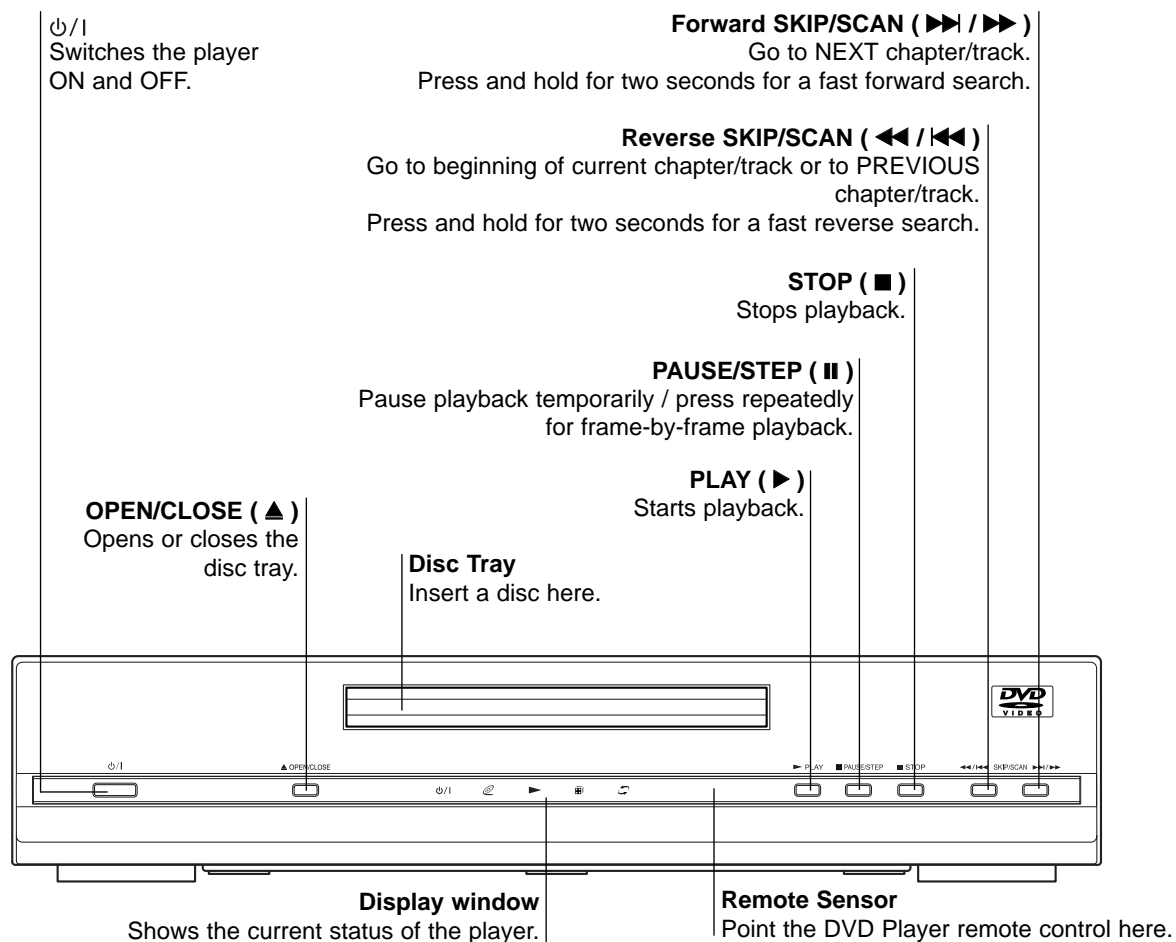

## Remote Control

**DVD/TV select buttons**  
Selects operational mode of remote control (see page 11).

**POWER**  
Switches DVD Player ON and OFF.  
This button is not available.

**DISPLAY**  
Accesses on-screen Display

**◀ ▶ ▲ ▼ (left/right/up/down)**  
- Select an item in the menu  
- Select channel of TV and changes volume of TV.

**MENU**  
Accesses menu on a DVD disc.

**Reverse SLOW (◀) •**  
Reverse slow playback.

**PAUSE/STEP (⏸) •**  
Pause playback temporarily / press repeatedly for frame-by-frame playback.

**STOP (■) •**  
Stops playback.

**Forward SLOW (▶) •**  
Forward slow playback.

**0-9 numerical buttons**  
Selects numbered items in a menu.

**AUDIO •**  
Selects an audio language (DVD) or an audio channel (CD).

**SUBTITLE •**  
Selects a subtitle language.

**ANGLE •**  
Selects a DVD camera angle if available

**SETUP •**  
Accesses or removes setup menu.

**MARKER •**  
Mark any point during playback.

**SEARCH •**  
Display MARKER SEARCH menu.

**OPEN/CLOSE**  
Open and close the disc tray.

**SOUND/MUTE**  
- Selects 3D SURROUND during disc playback.  
- turn off TV sound.

**RETURN/TV AV**  
- Remove the setup menu.  
- Selects AUX A/V input channel.

**SELECT/ENTER**  
Acknowledges menu selection.

**• TITLE**  
Displays the Title menu of the disc if available.

**• Forward SKIP/SCAN (▶▶▶) •**  
Search forward\* / go to next chapter or track.

**• PLAY (▶) •**  
Starts playback.

**• Reverse SKIP/SCAN (◀◀◀) •**  
Search backward\* / go to beginning of current chapter or track or go to previous chapter or track.

\* Press and hold button for about two seconds.

**PROGRAM**  
Accesses or removes Program menu.

**CLEAR**  
Remove a track number on the program menu or a mark on the MARKER SEARCH menu.

**• REPEAT**  
Repeat chapter, track, title, all.

**• A-B**  
Repeat sequence.

**• RANDOM**  
Play tracks in random order.

 
**• ZOOM**  
Enlarge video image.

### Remote Control Operation Range

Point the remote control at the remote sensor and press the buttons.

- **Distance:** About 23 ft (7 m) from the front of the remote sensor
- **Angle:** About 30° in each direction of the front of the remote sensor

### Remote control battery installation




Detach the battery cover on the rear of the remote control, and insert two R03 (size AAA) batteries with + and - aligned correctly.



**Caution**  
Do not mix old and new batteries. Never mix different types of batteries (standard, alkaline, etc.).

## Rear Panel

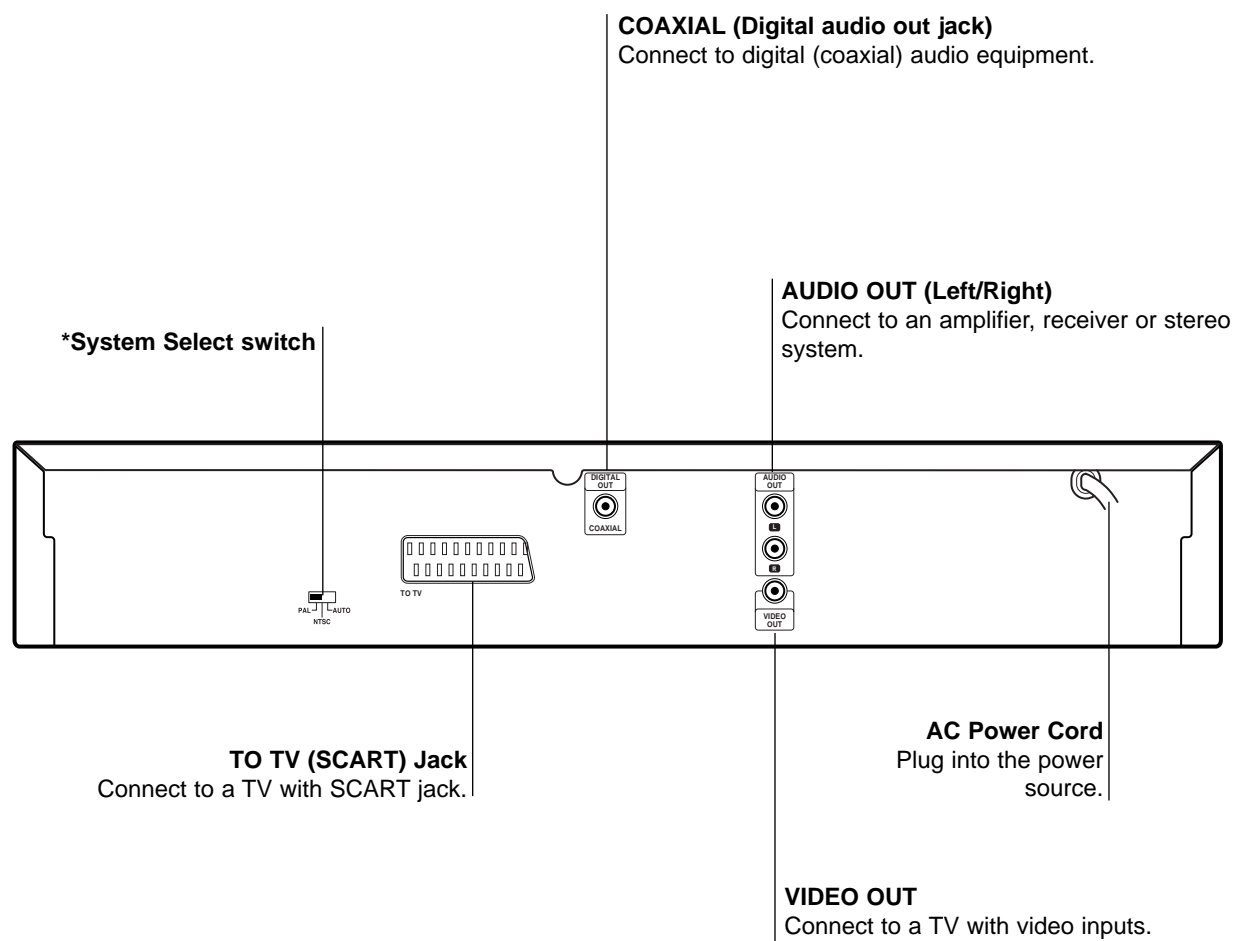 

### \* System Select switch

You can enjoy NTSC or PAL discs by using System Select switch to choose the appropriate system.

**PAL:** Select when DVD player is connected with PAL-TV.

**NTSC:** Select when DVD player is connected with NTSC-TV.

**AUTO:** Select when DVD player is connected with Multi system TV.

- When the selected System Select switch does not coincide with the system of your TV, normal color picture may not be displayed.
- Set System Select switch when the power is turned off.



**Do not touch the inner pins of the jacks on the rear panel. Electrostatic discharge may cause permanent damage to the unit.**



## Connections

### Tips

- Depending on your TV and other equipment you wish to connect, there are various ways you could connect the player. Use only one of the connections described below.
- Please refer to the manuals of your TV, VCR, Stereo System or other devices as necessary to make the best connections.
- For better sound reproduction, connect the player's AUDIO OUT jacks to the audio in jacks of your amplifier, receiver, stereo or audio/video equipment. See "Connecting to optional equipment" on page 10.

### Caution

- Make sure the DVD Player is connected directly to the TV. Tune the TV to the correct video input channel.
- Do not connect the DVD Player's AUDIO OUT jack to the phono in jack (record deck) of your audio system.
- Do not connect your DVD Player via your VCR. The DVD image could be distorted by the copy protection system.

## Connecting to a TV

- Make one of the following connections, depending on the capabilities of your existing equipment.

 
### Video connection

**1** Connect the VIDEO OUT jack on the DVD Player to the video in jack on the TV using the video cable (V).

**2** Connect the Left and Right AUDIO OUT jacks of the DVD Player to the audio left/right in jacks on the TV (A) using the audio cables.

### SCART connection

Connect the TO TV scart jack on the DVD Player to the corresponding in jacks on the TV using the scart cable (C).

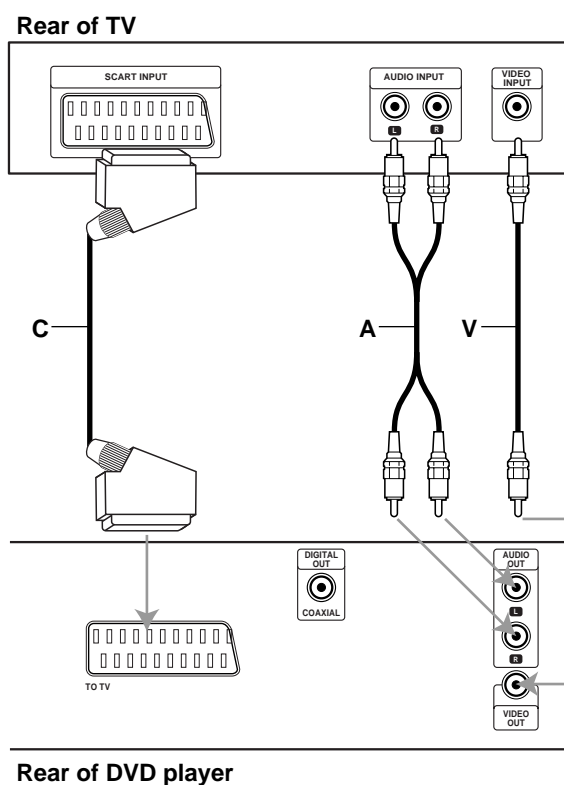

## Connections (Cont'd)

### Connecting to Optional Equipment

#### Connecting to an amplifier equipped with two channel analog stereo or Dolby Surround

Connect the Left and Right AUDIO OUT jacks on the DVD Player to the audio left and right in jacks on your amplifier, receiver or stereo system, using the audio cables (A).

#### Connecting to an amplifier equipped with two channel digital stereo (PCM) or to an Audio/Video receiver equipped with a multi-channel decoder (Dolby Digital™, MPEG 2 or DTS)

- 1 Connect one of the DVD Player's DIGITAL AUDIO OUT jacks (COAXIAL X) to the corresponding in jack on your amplifier. Use an optional digital (coaxial X) audio cable.
- 2 You will need to activate the player's digital output. (See "Digital Audio Output" on page 13).

#### **T** Digital Multi-channel sound

A digital multi-channel connection provides the best sound quality. For this you need a multi-channel Audio/Video receiver that supports one or more of the audio formats supported by your DVD Player (MPEG 2, Dolby Digital and DTS). Check the receiver manual and the logos on the front of the receiver.

 
#### **⚠** Warning:

Due to the DTS Licensing agreement, the digital output will be in DTS digital out when DTS audio stream is selected.

#### **N** Notes

- If the audio format of the digital output does not match the capabilities of your receiver, the receiver will produce a strong, distorted sound or no sound at all.
- Six Channel Digital Surround Sound via digital connection can only be obtained if your receiver is equipped with a Digital Multi-channel decoder.
- To see the audio format of the current DVD in the On-Screen Display, press AUDIO.

Rear of DVD player

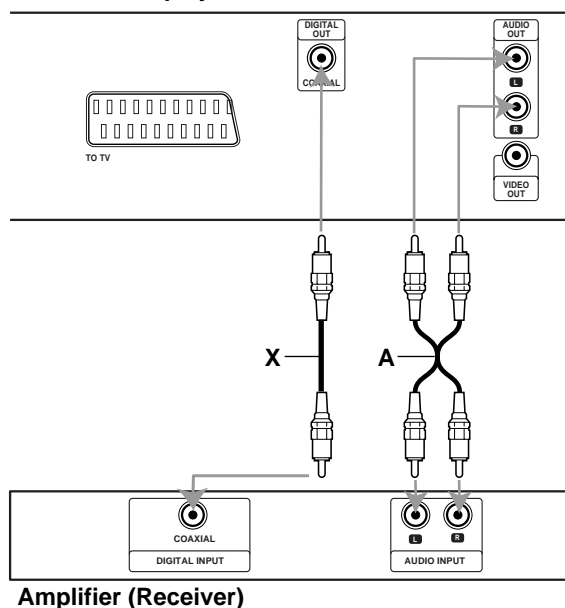

## Before Operation

### Controlling the TV

Your remote control is capable of operating your DVD as well as limited functions of LG TV.

**Before using the remote control, press DVD or TV to select the device to be operated.**

To switch the remote control mode (to operate a different device), be sure to press DVD or TV button first.

The POWER, PR./CH(▲/▼), VOL(◀▶), MUTE and TV AV buttons on remote control are activated for controlling LG TV.

#### Setting Remote Control Codes for LG TV

- This remote control supports two remote control codes for LG TV: Code 1 and Code2.
- When the unit is shipped from the factory, the remote control is set to Code 1.

 
If your LG TV is not operated, set the remote control to Code 2.

- To set the remote control Code 2, hold down both the TV button and "2" number button on the remote control. (If the batteries in the remote control are replaced while the remote control is set to Code 2, the setting will revert Code 1.)
- To set the remote control back to Code 1, hold down both the TV button and "1" number button on the remote control.

#### Notes

- If the remote control does not operate your particular TV, try one of the other code or use the remote control originally supplied with the LG TV.
- Due to the variety of codes used by manufacturer, OUR COMPANY cannot guarantee that the remote control will operate every model of the LG TV.

### General Explanation

This manual gives the basic instructions for operating the DVD Player. Some DVDs require specific operation or allow only limited operation during playback. When this occurs, the symbol  appears on the TV screen, indicating that the operation is not permitted by the DVD Player or is not available on the disc.

### On-Screen Display

The general playback status can be displayed on the TV screen. Some items can be changed on the menu.

#### On-screen display operation







**1** Press DISPLAY during playback.

**2** Press ▲ or ▼ to select an item.  
The selected item will be highlighted.

**3** Press ◀ or ▶ to change the setting of an item.

The number buttons can be also be used for setting numbers (e.g., title number). For some functions, press SELECT/ENTER to execute the setting.








#### Temporary Feedback Field Icons

-  TITLE Repeat Title
-  CHAPT Repeat Chapter
-  A B Repeat A-B
-  OFF Repeat Off
-  Resume play from this point
-  Action prohibited or not available

#### Notes

- Some discs may not provide all of the features on the on-screen display example shown below.
- If no button is pressed for 10 seconds, the On-Screen Display disappears.

#### DVD

Items		Function (Press ▲/▼ to select desired item)	Selection Method
Title Number	 1/3	Shows the current title number and total number of titles, and skip to the desired title number.	◀ / ▶, or Numeric, SELECT/ENTER
Chapter Number	 1/12	Shows the current chapter number and total number of chapters, and skip to the desired chapter number.	◀ / ▶, or Numeric, SELECT/ENTER
Time search	 0:16:57	Shows the elapsed playing time, and search the point by the elapsed time directly.	Numeric, SELECT/ENTER
Audio language and Digital Audio Output mode	 1 ENG DIG 6 CH	Shows the current audio soundtrack language, encoding method, and changes the setting.	◀ / ▶
Subtitle language	 OFF	Shows the current subtitles language, and changes the setting.	◀ / ▶
Angle	 1/1	Shows the current angle number and total number of angles, and changes the angle number.	◀ / ▶
Sound	 NORM.	Shows the current sound mode, and changes the setting.	◀ / ▶

## Before Operation (Cont'd)

### Initial Settings

You can set your own Personal Preferences on the player.

### Using your DVD player very first time

When you have just connected your DVD player for the very first time, the first on-screen menu asks which language you prefer to use for your DVD player. Select a language using **▲/▼** buttons then press **SELECT/ENTER**.

This operation changes the language used for the on-screen displays and setup menu.



### Initial Settings General Operation

- 1 Press SETUP.**  
The setup menu appears.



- 2 Press ▲/▼ to select the desired item.**  
The screen will show the current setting for the selected item, as well as alternate setting(s).
- 3 While the desired item is selected, press ►, then ▲/▼ to select the desired setting.**
- 4 Press SELECT/ENTER to confirm your selection.**  
Some items require additional steps.
- 5 Press SETUP, RETURN or PLAY to exit the setup menu.**

### Language

#### Disc Language **DVD**

Select a language for the disc's Menu, Audio and Subtitle.

**Original** : The original language set for the disc is selected.

**Other** : To select another language, press number buttons to enter the corresponding 4-digit number according to the language code list on page 22. If you enter the wrong language code, press **CLEAR**.



#### Menu Language

Select a language for the setup menu. This is the menu you see when you press **SETUP**.



 
### Picture

#### TV Aspect **DVD**

**4:3 Letterbox**: Select when a standard 4:3 TV is connected. Displays theatrical images with masking bars above and below the picture.

**4:3 Panscan**: Select when a standard 4:3 TV is connected. Displays pictures cropped to fill your TV screen. Either sides of the picture are cut off.

**16:9 Wide**: Select when a 16:9 wide TV is connected.

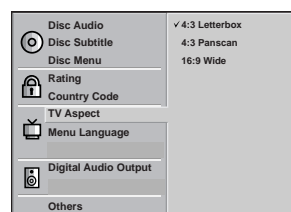


## Before Operation (Cont'd)

### Sound

#### Digital Audio Output

 Each DVD disc has a variety of audio output options. Set the player's Digital Audio Output according to the type of audio system you use.

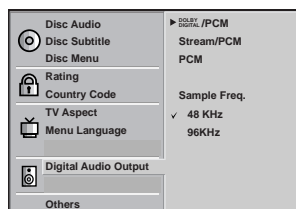

**DOLBY DIGITAL/PCM:** Select "DOLBY DIGITAL/PCM" if you connected the DVD Player's DIGITAL OUT jack to a Dolby Digital decoder (or an amplifier or other equipment with a Dolby Digital decoder).

**Stream/PCM:** Select "Stream/PCM" if you connected the DVD Player's DIGITAL OUT jack to an amplifier or other equipment with a DTS decoder, Dolby Digital decoder or MPEG decoder.

**PCM:** Select when connected to a 2 channel digital stereo amplifier. The DVD player outputs sounds in the PCM 2ch format when you play a DVD video disc recorded on the Dolby Digital, MPEG1 or MPEG2 recording system.


#### Sample Frequency

 To change the Sample Frequency setting, first select the desired Digital Audio Output as indicated as above. If your receiver or amplifier is NOT capable of handling 96KHz signals, select 48KHz. When this choice is made, this unit will automatically convert any 96KHz signals to 48KHz so your system can decode them. If your receiver or amplifier is capable of handling 96KHz signals, select 96KHz. When this choice is made, this unit will pass each type of signal through without any further processing.

### Others

The DRC and Vocal settings can be changed.

- Press ▲/▼ to select the desired item and press SELECT/ENTER. The setting of the selected item is changed between On and Off.

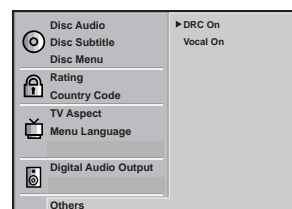

#### Dynamic Range Control (DRC)

With the DVD format, you can hear a program's sound-track in the most accurate and realistic presentation possible, thanks to digital audio technology. However, you may wish to compress the dynamic range of the audio output (the difference between the loudest sounds and the quietest ones). Then, you may listen to a movie at a lower volume without losing clarity of sound. Set DRC to On for this effect.

#### Vocal

 
Set Vocal to On only when a multi-channel karaoke DVD is playing. The karaoke channels on the disc will mix into a normal stereo sound.

## Before Operation (Cont'd)

### Parental Control

#### Rating **DVD**


Movies on DVDs may contain scenes not suitable for children. Therefore, discs may contain Parental Control information that applies to the complete disc or to certain scenes on the disc. These scenes are rated from 1 to 8, and alternatively, more suitable scenes are available for selection on some discs. Ratings are country dependent. The Parental Control feature allows you to prevent discs from being played by your children or to have certain discs played with alternative scenes.

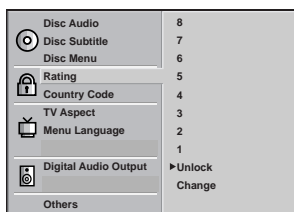

- 1** Select "Rating" on the Setup menu using the **▲/▼** buttons.
- 2** While "Rating" is selected, press **►**.
- 3** When you have not entered a password yet; Enter a 4-digit password using the numerical buttons to create a personal 4-digit security password, then press **SELECT/ENTER**. And enter the 4-digit password again and press **SELECT/ENTER** to verify.  
**When you have already entered a password;** Enter a 4-digit password using the numerical buttons to confirm the personal 4-digit security password, then press **SELECT/ENTER**.  
  
If you make a mistake before pressing **SELECT/ENTER**, press **CLEAR** and enter 4-digit security password again.
- 4** Select a rating from 1 to 8 using the **▲/▼** buttons. One (1) has the least playback restrictions. Eight (8) has the most playback restrictions.  
**Unlock:** If you select **Unlock**, Parental Control is not active. The disc will play in full.  
**Ratings 1 to 8:** Some discs contain scenes not suitable for children. If you set a rating for the player, all disc scenes with the same rating or lower will be played. Higher rated scenes will not be played unless an alternative scene is available on the disc. The alternative must have the same rating or a lower one. If no suitable alternative is found, playback will stop. You must enter the 4-digit password or change the rating level in order to play the disc.
- 5** Press **SELECT/ENTER** to confirm your rating selection, then press **SETUP** to exit the menu.

#### Country Code **DVD**

 Enter the code of a country/area whose standards were used to rate the DVD video disc, referring to the list (See "Country Code List", page 23.).

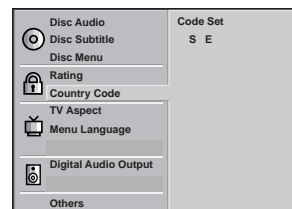

- 1** Select Country Code using the **▲/▼** buttons on the setup menu.
- 2** While Country Code is selected, press **►**.
- 3** Follow step 3 of "Rating" on left.
- 4** Select the first character using the **▲/▼** buttons.
- 5** Shift the cursor using **◀▶** buttons and select the second character using **▲/▼** buttons.
- 6** Press **SELECT/ENTER** to confirm your country code selection, then press **SETUP** to exit the menu.

#### **N** Note

Confirmation of the 4-digit password is necessary when the code is changed (see "Changing the 4-digit code" on below ).

#### Changing the 4-digit code

- 1 Follow Steps 1-2 as shown above to the left (Rating).
- 2 Enter the old code, then press **SELECT/ENTER**.
- 3 Select **Change** using the **▲/▼** buttons then press **SELECT/ENTER**.
- 4 Enter the new 4-digit code, then press **SELECT/ENTER**.
- 5 Enter exactly the same code a second time and verify by pressing **SELECT/ENTER**.
- 6 Press **SETUP** to exit the menu.

#### If you forget your 4-digit code

If you forget your password, to clear the current password, follow the procedure below.

- 1 Press **SETUP** to display the setup menu.
- 2 Use the Number buttons to enter the 6-digit number "210499."  
The 4-digit password is cleared.
- 3 Enter a new code as shown above to the left (Rating).

## Operation with DVD

### Playing a DVD

#### Getting to play **DVD**

- Turn on the TV and select the video input source connected to the DVD player.
- When you want to enjoy the sound of discs or from the audio system, turn on the audio system and select the input source connected to the DVD player.

#### **1** Press OPEN/CLOSE to open the disc tray.

#### **2** Load your chosen disc in the tray, with the label facing up.

When a double-sided DVD is inserted, make sure the side you want to play is facing up.

#### **3** Press OPEN/CLOSE to close the tray. READING appears on the TV screen, and playback starts automatically. If playback does not start, press PLAY. In some cases, the disc menu might appear instead.

#### When the menu screen is displayed

The menu screen may be displayed first after loading a DVD which contains a menu.

#### **DVD**

Use the ◀ ▶ ▲ ▼ buttons to select the title/chapter you want to view, then press SELECT/ENTER to start playback.  
Press TITLE or MENU to return to the menu screen.

#### Notes

- If Parental Control is set and the disc is not within the Rating settings (not authorized), the 4-digit code must be entered and/or the disc must be authorized (see "Parental Control", on page 14).
- DVDs may have a region code.
- Your player will not play discs that have a region code different from your player. The region code for this player is 2 (two).

### General Features

#### Note

Unless stated, all operations described are based on remote control use. Some operations can be carried out using the setup menu.

#### Moving to another TITLE **DVD**



When a disc has more than one title, you can move to another title as follows:

- Press DISPLAY when playback is stopped, then press the appropriate numerical button (0-9) to select a title number.

#### Moving to another CHAPTER **DVD**



When a title on a disc has more than one chapter, you can move to another chapter as follows:

- Press SKIP/SCAN ◀◀ or ▶▶ briefly during playback to select the next chapter or to return to the beginning of the current chapter.
- Press ◀◀ twice briefly to step back to the previous chapter.
- To go directly to any chapter during DVD playback, press DISPLAY. Then, press ▲/▼ to select C (chapter). Then, enter the chapter number using the numerical buttons (0-9).

#### Note

For two-digit numbers, press the buttons in rapid succession.

#### Slow Motion **DVD**

- 1 Press SLOW ◀◀ or ▶▶ during playback.  
The player will enter SLOW mode.
- 2 Use the SLOW ◀◀ or ▶▶ to select the required speed:  
◀◀ 1/16, ◀◀ 1/8, ◀◀ 1/4 or ◀◀ 1/2 (backward), or ▶▶ 1/16, ▶▶ 1/8, ▶▶ 1/4 or ▶▶ 1/2 (forward).
- 3 To exit slow motion mode, press PLAY.



## Operation with DVD

### General Features (cont'd)

#### Still Picture and Frame-by-frame playback

##### DVD

- 1 Press PAUSE during playback.  
The player will now go into PAUSE mode.
- 2 You can advance the picture frame by frame by pressing PAUSE repeatedly on the remote control.

#### Search

##### DVD

- 1 Press and hold SKIP/SCAN or for about two seconds during playback.  
The player will now go into SEARCH mode.
- 2 Press and hold SKIP/SCAN or repeatedly to select the required speed: X2, X4, X16, X100 (backward) or X2, X4, X16, X100 (forward).
- 3 To exit SEARCH mode, press PLAY.

#### Random

##### Karaoke DVD

- 1 Press RANDOM during playback or in stop mode.  
The unit automatically begins Random Playback and appears on the display window.
- 2 To return to normal playback, press RANDOM until disappears on the display window.

#### Repeat

##### DVD



##### DVD Video Discs - Repeat Chapter/Title/Off

- 1 To repeat the currently playing chapter, press REPEAT.  
The Repeat Chapter icon appears on the TV screen.
- 2 To repeat the title currently playing, press REPEAT a second time.  
The Repeat Title icon appears on the TV screen.
- 3 To exit Repeat mode, press REPEAT a third time.  
The Repeat Off icon appears on the TV screen.

#### Repeat A-B

##### DVD



To repeat a sequence in a title:

- 1 Press A-B at your chosen starting point.  
A- appears briefly on the TV screen.
- 2 Press A-B again at your chosen end point.  
A-B appears briefly on the TV screen, and the repeat sequence begins ( appears on the player's display).
- 3 To cancel the sequence, press A-B.

#### Time Search

##### DVD



The Time Search function allows you to start playing at any chosen time on the disc.

- 1 Press DISPLAY during playback. The on-screen display appears on the screen.  
The Time Search box shows the elapsed playing time of the current disc.
- 2 Within 10 seconds, press / to select the Time Search icon in the on-screen display.  
The ":-:--:-:" appears in the Time Search box.
- 3 Within 10 seconds, use the numerical buttons to enter the required start time. Enter hours, minutes and seconds from left to right in the box.  
If you enter the wrong numbers, press CLEAR to remove the numbers you entered. Then enter the correct numbers.
- 4 Within 10 seconds, press SELECT/ENTER to confirm the start time.  
Playback starts from the selected time on the disc. If you enter an invalid time, playback will continue from the current point.

#### Zoom

##### DVD

The Zoom function allows you to enlarge the video image and to move through the enlarged image.

- 1 Press ZOOM during playback or still playback to activate the Zoom function.  
If you press ZOOM repeatedly, the magnification level increases up to six times.
- 2 Use the /// buttons to move through the zoomed picture.
- 3 Press CLEAR to resume normal playback or return to the paused image.

#### Note

- The zoom function may not work for some DVDs.
- The zoom function may not work on multi-angle scenes.



## Operation with DVD

### General Features (cont'd)

#### 3D Surround



This unit can produce a 3D Surround effect, which simulates multi-channel audio playback from two conventional stereo speakers, instead of the five or more speakers normally required to listen to multi-channel audio from a home theater system.

- 1 Press SOUND to select "3D SUR" during playback.
- 2 To turn off the 3D Surround effect, press SOUND again to select "NORM".

#### Marker Search



You can start playback from a memorized point. Up to nine points can be memorized.

To enter a mark, follow these steps.

- 1 During disc playback, press MARKER when playback reaches the spot that you want to memorize.  
The Marker icon will appear on the TV screen briefly.
- 2 Repeat step 1 to enter up to nine Marker points on a disc.

#### To Recall a Marked Scene

- 1 During disc playback, press SEARCH.  
The MARKER SEARCH menu will appear on the screen.
- 2 Within 10 seconds, press ◀▶ to select a Marker number that you want to recall.
- 3 Press SELECT/ENTER.  
Playback will start from the Marked scene.
- 4 To remove the MARKER SEARCH menu, press SEARCH.

#### To clear a Marked Scene

- 1 During disc playback, press SEARCH.  
The MARKER SEARCH menu will appear on the screen.
- 2 Press ◀▶ to select the Marker number that you want to erase.
- 3 Press CLEAR.  
The Marker number will be erased from the list.
- 4 Repeat steps 2 and 3 to erase additional Marker numbers.
- 5 To remove the MARKER SEARCH menu, press SEARCH.

### Special DVD Features

#### Checking the contents of DVD Video discs: Menus

DVDs may contain menus that allow you to access special features. To use the disc menu, press MENU. Then, press the appropriate numerical button to select an item. Or, use the ◀▶/▲/▼ buttons to highlight your selection, then press SELECT/ENTER.

#### Title Menu

- 1 Press TITLE.  
If the current title has a menu, the menu will appear on the screen. Otherwise, the disc menu may appear.
- 2 The menu can list camera angles, spoken language and subtitle options, and chapters for the title.
- 3 To remove the title menu, press TITLE again.

#### Disc Menu

- 1 Press MENU.  
The disc menu is displayed.
- 2 To remove the disc menu, press MENU again.

#### Camera Angle

If the disc contains sequences recorded from different camera angles. You can then change the camera angle if you wish.

- Press ANGLE repeatedly during playback to select a desired angle.  
The number of the current angle appears on the display.

#### Changing the Audio Language



Press AUDIO repeatedly during playback to hear a different audio language or audio track.

#### Subtitles

Press SUBTITLE repeatedly during playback to see the different subtitle languages.



#### Note

If ⓪ appears, the feature is not available on the disc.

 
## Operation with Audio CD and MP3 Disc

### Playing an Audio CD and MP3 disc

The DVD Player can play MP3 format recordings on CD-ROM, CD-R or CD-RW discs.

Before playing MP3 recordings, read the notes of MP3 Recordings on page 20.

- 1 Insert a disc and close the tray.**  
The menu appears on the TV screen.

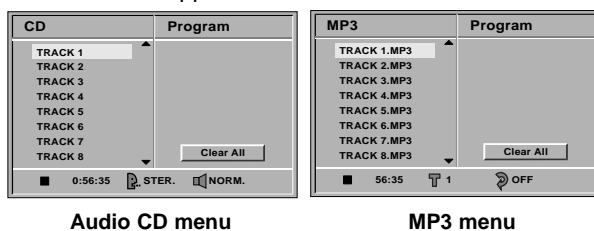

- 2 Press ▲/▼ to select a track then press PLAY.**  
Playback starts.  
Playback will stop at the end of the disc.
- 3 To stop playback at any other time, press STOP.**

### Pause **CD** **MP3**

- Press PAUSE during playback.
- To return to playback, press PLAY or press PAUSE again.

### Moving to another Track **CD** **MP3**

- Press SKIP/SCAN ◀◀ or ▶▶ briefly during playback to go to the next track or to return to the beginning of the current track.
- Press SKIP/SCAN ◀◀ twice briefly to step back to the previous track.
- In case of audio CD, to go directly to any track, enter the track number using the numerical buttons (0-9) during playback.

### Repeat TRACK/ALL/OFF **CD** **MP3**

- To repeat the track currently playing, press REPEAT.  
The Repeat Track icon appears on the menu screen.
- To repeat all tracks of disc in the unit, press REPEAT a second time.  
The Repeat ALL icon appears on the menu screen.
- To exit Repeat mode, press REPEAT a third time.  
The Repeat OFF icon appears on the menu screen.

### Search **CD**

- Press and hold SKIP/SCAN ◀◀ or ▶▶ for about two seconds during playback.  
The player will now go into SEARCH mode.
- Press and hold SKIP/SCAN ◀◀ or ▶▶ repeatedly to select the required speed: ◀◀X2, ◀◀X4, ◀◀X8 (backward) or ▶▶X2, ▶▶X4, ▶▶X8 (forward).
- Search speed and direction are indicated on the menu screen.
- To exit SEARCH mode, press PLAY.

### Random **CD**

- Press RANDOM during playback or when playback is stopped.  
The unit automatically begins Random Playback and the RAND. icon appears on the display window and menu screen.
- To return to normal playback, press RANDOM repeatedly until the RAND. icon disappears on the display window and menu screen.

### Repeat A-B **CD**

To repeat a sequence.

- During disc playback, press A-B at your chosen starting point.  
The Repeat icon and "A -" appears on the menu screen.
- Press A-B again at your chosen end point.  
The Repeat icon and "A B" appears on the menu screen, and the sequence begins to play repeatedly.
- To exit the sequence and return to normal play, press A-B again.  
The Repeat icon and "OFF" appears on the menu screen.

### 3D Surround **CD**

This unit can produce a 3D Surround effect, which simulates multi-channel audio playback from two conventional stereo speakers, instead of the five or more speakers normally required to listen to multi-channel audio from a home theater system.

- Press SOUND to select "3D SUR" during playback.
- To turn off the 3D Surround effect, press SOUND again to select "NORM".

### Changing the Audio Channel **CD**

Press AUDIO repeatedly during playback to hear a different audio channel (STEREO, LEFT or RIGHT).


## Programmed Playback CD MP3

### Programmed Playback with Audio CD and MP3 Disc


Program allows you to store your favorite tracks for a particular disc in the player memory.

Program can contain 32 tracks (Audio CD) or 60 tracks (MP3 disc).

 
- 1 Insert the disc and close the tray.**  
The menu is displayed on the TV screen.
- 2 Press PROGRAM during playback or in the stop mode to enter the Program Edit mode.**

The  will appear to the right of the word Program on the right side of the menu screen.

#### Note

Press PROGRAM to exit the Program Edit mode; the  mark will disappear.

- 3 Press ▲/▼ to select a track then press SELECT/ENTER to place the selected track on the Program list.**
- 4 Repeat step 3 to place additional tracks on the Program list.**

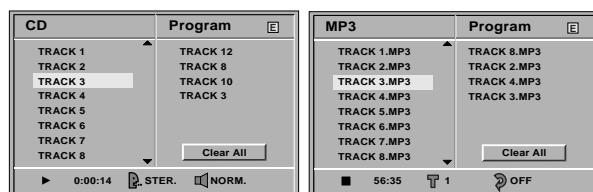

Audio CD menu

MP3 menu

- 5 Press ►.**  
The programmed track you selected last is highlighted on the program list.
- 6 Press ▲/▼ to select the track you want to start playing.**  
Press TITLE to move to the next page.  
Press MENU to move to the previous page.
- 7 Press PLAY to start.**  
Playback begins in the order in which you programmed the tracks and "PROG." appears on the menu screen. Playback stops after all of the tracks on the Program list have played once.


### To resume normal playback from programmed playback

Press and hold PROGRAM until "PROG." indicator disappears on the menu screen.

### Repeat Programmed Tracks

- To repeat the track currently playing, press REPEAT. The Repeat Track icon appears on the menu screen.
- To repeat all tracks of program list, press REPEAT a second time. The Repeat All icon appears on the menu screen.
- To exit Repeat mode, press REPEAT a third time. The Repeat Off icon appears on the menu screen.

### Erasing a Track from Program List

- 1 Press PROGRAM during playback or in the stop mode to enter the Program Edit mode.**  
The  mark will appear.
- 2 Press ► to move to the Program list.**
- 3 Use ▲/▼ to select the track that you wish to erase from the Program list.**
- 4 Press CLEAR.**  
The track will be erased from the Program list.

### Erasing the Complete Program List

- 1 Follow steps 1-2 of "Erasing a Track from Program List" as above.**
- 2 Use ▲/▼ to select "Clear All", then press SELECT/ENTER.**  
The complete Program for the disc will be erased. The programs are also cleared when the disc is removed.

## Additional Information

### Last Condition Memory

**DVD** **CD**

This player memorizes the last condition for the last disc you have watched. Settings remain in memory even if you remove the disc from the player or switch off the player. If you load a disc that has its settings memorized, the latest stop position is automatically recalled.

#### Notes

- Settings are stored in memory for use any time.
- This player does not memorize settings of a disc if you switch off the player before commencing to play it.

### Screen Saver

The screen saver picture appears when you leave the DVD Player in stop mode for about five minutes. After the Screen Saver has been engaged for about five minutes, the DVD Player will automatically turn itself off.

### Video Mode Setting **DVD**

- With certain discs, the playback picture may be flickering or Dot Crawl is shown on straight lines. That means Vertical interpolation or De-interlace is not perfectly matched with the disc. In that case, the picture quality can be improved with changing video mode.
- To change the video mode, press and hold DISPLAY about 3 seconds during playback of the disc. Changed video mode number is displayed on the TV screen. Check whether video quality is improved. You can repeat above procedure until desired picture quality appears.
- Procedure of video mode is changed;  
MODE1 → MODE2 → MODE3 → MODE4 → MODE5 →
- If you turn off the the power, the video mode will be back to initial state (MODE1).

### Notes on MP3 Discs

#### About MP3

- An MP3 file is audio data compressed by using MPEG1, the audio layer-3 file-coding scheme. We call files that have the “.mp3” file extension “MP3 files”.
- The player can not read an MP3 file that has a file extension other than “.mp3”.
- The player can not read a fake MP3 file that has a file extension “.mp3”.

#### **MP3 disc compatible with this player is limited as follows:**



1. Sampling Frequency / only at 44.1kHz
2. Bit rate / within 32 - 320kbps
3. CD-R physical format should be “ISO 9660”
4. If you record MP3 files using the software which cannot create a FILE SYSTEM, for example “Direct-CD” etc., it is impossible to playback MP3 files. We therefore recommend that you use “Easy-CD Creator”, which creates an ISO9660 file system.
5. A single session disc requires MP3 files in the first track. If there is no MP3 file in the 1st track, it cannot playback MP3 files. If you wish to playback MP3 files, format all the data in the disc or use a new one.
6. We do not recommend using CD-RW discs. Please use finished CD-R discs only.
7. File names should be named using 8 letters or less and must incorporate “.mp3” extension e.g. “\*\*\*\*\*.MP3”.
8. Do not use special letters such as “\_?!><+\*}{‘[@ ]:;V.” etc.
9. Total number of files on the disc should be less than 200.
10. Use 74 minute CD-R discs (650M), Do not use 80 minute CD-R (700M) software

This DVD player requires discs/recordings to meet certain technical standards in order to achieve optimal playback quality. Pre-recorded DVDs are automatically set to these standards. There are many different types of recordable disc formats (including CD-R containing MP3 files).

Customers should also note that permission is required in order to download MP3 files and music from the Internet. Our company has no right to grant such permission. Permission should always be sought from the copyright owner.

## Troubleshooting

Check the following guide for the possible cause of a problem before contacting service.

Symptom	Cause	Correction
No power.	<ul style="list-style-type: none"> <li>The power cord is disconnected.</li> </ul>	<ul style="list-style-type: none"> <li>Plug the power cord into the wall outlet securely.</li> </ul>
The power is on, but the DVD player does not work.	<ul style="list-style-type: none"> <li>No disc is inserted.</li> </ul>	<ul style="list-style-type: none"> <li>Insert a disc. (Check the disc indicator (  ) in the display window is lit.)</li> </ul>
No picture.	<ul style="list-style-type: none"> <li>The TV is not set to receive DVD signal output.</li> </ul>	<ul style="list-style-type: none"> <li>Select the appropriate video input mode on the TV so the picture from the DVD player appears on the TV screen.</li> </ul>
	<ul style="list-style-type: none"> <li>The video cable is not connected securely.</li> </ul>	<ul style="list-style-type: none"> <li>Connect the video cable into the jacks securely.</li> </ul>
	<ul style="list-style-type: none"> <li>The connected TV power is turned off.</li> </ul>	<ul style="list-style-type: none"> <li>Turn on the TV.</li> </ul>
No sound.	<ul style="list-style-type: none"> <li>The equipment connected with the audio cable is not set to receive DVD signal output.</li> </ul>	<ul style="list-style-type: none"> <li>Select the correct input mode of the audio receiver so you can listen to the sound from the DVD player.</li> </ul>
	<ul style="list-style-type: none"> <li>The audio cables are not connected securely.</li> </ul>	<ul style="list-style-type: none"> <li>Connect the audio cable into the jacks securely.</li> </ul>
	<ul style="list-style-type: none"> <li>The power of the equipment connected with the audio cable is turned off.</li> </ul>	<ul style="list-style-type: none"> <li>Turn on the equipment connected with the audio cable.</li> </ul>
	<ul style="list-style-type: none"> <li>The Digital Audio Output is set to the wrong position.</li> </ul>	<ul style="list-style-type: none"> <li>Set the Digital Audio Output to the correct position, then turn on the DVD player again by pressing POWER.</li> </ul>
The playback picture is poor.	<ul style="list-style-type: none"> <li>The disc is dirty.</li> </ul>	<ul style="list-style-type: none"> <li>Clean the disc.</li> </ul>
The DVD player does not start playback.	<ul style="list-style-type: none"> <li>No disc is inserted.</li> </ul>	<ul style="list-style-type: none"> <li>Insert a disc. [Check the disc indicator (  ) in the display window is lit.]</li> </ul>
	<ul style="list-style-type: none"> <li>An unplayable disc is inserted.</li> </ul>	<ul style="list-style-type: none"> <li>Insert a playable disc. (Check the disc type, color system and Regional code.)</li> </ul>
	<ul style="list-style-type: none"> <li>The disc is placed upside down.</li> </ul>	<ul style="list-style-type: none"> <li>Place the disc with the playback side down.</li> </ul>
	<ul style="list-style-type: none"> <li>The disc is not placed within the guide.</li> </ul>	<ul style="list-style-type: none"> <li>Place the disc on the disc tray correctly inside the guide.</li> </ul>
	<ul style="list-style-type: none"> <li>The disc is dirty.</li> </ul>	<ul style="list-style-type: none"> <li>Clean the disc.</li> </ul>
	<ul style="list-style-type: none"> <li>The Rating level is set.</li> </ul>	<ul style="list-style-type: none"> <li>Cancel the Rating function or change the rating level.</li> </ul>
The remote control does not work properly.	<ul style="list-style-type: none"> <li>The remote control is not pointed at the remote sensor of the DVD player.</li> </ul>	<ul style="list-style-type: none"> <li>Point the remote control at the remote sensor of the DVD player.</li> </ul>
	<ul style="list-style-type: none"> <li>The remote control is too far from the DVD player.</li> </ul>	<ul style="list-style-type: none"> <li>Operate the remote control within about 23 ft (7 m).</li> </ul>
	<ul style="list-style-type: none"> <li>There is an obstacle in the path of the remote control and the DVD player.</li> </ul>	<ul style="list-style-type: none"> <li>Remove the obstacle.</li> </ul>
	<ul style="list-style-type: none"> <li>The batteries in the remote control are exhausted.</li> </ul>	<ul style="list-style-type: none"> <li>Replace the batteries with new ones.</li> </ul>

## Language Code List

Enter the appropriate code number for the initial settings “Disc Audio”, “Disc Subtitle” and/or “Disc Menu” (See page 12).

Code	Language	Code	Language	Code	Language	Code	Language
6565	Afar	7079	Faroese	7678	Lingala	8375	Slovak
6566	Abkhazian	7082	French	7679	Laothian	8376	Slovenian
6570	Afrikaans	7089	Frisian	7684	Lithuanian	8377	Samoan
6577	Ameharic	7165	Irish	7686	Latvian, Lettish	8378	Shona
6582	Arabic	7168	Scots Gaelic	7771	Malagasy	8379	Somali
6583	Assamese	7176	Galician	7773	Maori	8381	Albanian
6588	Aymara	7178	Guarani	7775	Macedonian	8382	Serbian
6590	Azerbaijani	7185	Gujarati	7776	Malayalam	8385	Sudanese
6665	Bashkir	7265	Hausa	7778	Mongolian	8386	Swedish
6669	Byelorussian	7273	Hindi	7779	Moldavian	8387	Swahili
6671	Bulgarian	7282	Croatian	7782	Marathi	8465	Tamil
6672	Bihari	7285	Hungarian	7783	Malay	8469	Telugu
6678	Bengali; Bangla	7289	Armenian	7784	Maltese	8471	Tajik
6679	Tibetan	7365	Interlingua	7789	Burmese	8472	Thai
6682	Breton	7378	Indonesian	7865	Nauru	8473	Tigrinya
6765	Catalan	7383	Icelandic	7869	Nepali	8475	Turkmen
6779	Corsican	7384	Italian	7876	Dutch	8476	Tagalog
6783	Czech	7387	Hebrew	7879	Norwegian	8479	Tonga
6789	Welsh	7465	Japanese	7982	Oriya	8482	Turkish
6865	Danish	7473	Yiddish	8065	Panjabi	8484	Tatar
6869	German	7487	Javanese	8076	Polish	8487	Twi
6890	Bhutani	7565	Georgian	8083	Pashto, Pushto	8575	Ukrainian
6976	Greek	7575	Kazakh	8084	Portuguese	8582	Urdu
6978	English	7576	Greenlandic	8185	Quechua	8590	Uzbek
6979	Esperanto	7577	Cambodian	8277	Rhaeto-Romance	8673	Vietnamese
6983	Spanish	7578	Kannada	8279	Rumanian	8679	Volapük
6984	Estonian	7579	Korean	8285	Russian	8779	Wolof
6985	Basque	7583	Kashmiri	8365	Sanskrit	8872	Xhosa
7065	Persian	7585	Kurdish	8368	Sindhi	8979	Yoruba
7073	Finnish	7589	Kirghiz	8372	Serbo-Croatian	9072	Chinese
7074	Fiji	7665	Latin	8373	Singhalese	9085	Zulu

## Country Code List

Enter the appropriate code number for the initial setting "Country Code" (See page 14).

Code	Country	Code	Country	Code	Country	Code	Country
AD	Andorra	ER	Eritrea	LC	Saint Lucia	SB	Solomon Islands
AE	United Arab Emirates	ES	Spain	LI	Liechtenstein	SC	Seychelles
AF	Afghanistan	ET	Ethiopia	LK	Sri Lanka	SD	Sudan
AG	Antigua and Barbuda	FI	Finland	LR	Liberia	SE	Sweden
AI	Anguilla	FJ	Fiji	LS	Lesotho	SG	Singapore
AL	Albania	FK	Falkland Islands	LT	Lithuania	SH	Saint Helena
AM	Armenia	FM	Micronesia	LU	Luxembourg	SI	Slovenia
AN	Netherlands Antilles	FO	Faroe Islands	LV	Latvia	SJ	Svalbard and Jan Mayen Islands
AO	Angola	FR	France	LY	Libya	SK	Slovak Republic
AQ	Antarctica	FX	France (European Territory)	MA	Morocco	SL	Sierra Leone
AR	Argentina	GA	Gabon	MC	Monaco	SM	San Marino
AS	American Samoa	GB	Great Britain	MD	Moldavia	SN	Senegal
AT	Austria	GD	Grenada	MG	Madagascar	SO	Somalia
AU	Australia	GE	Georgia	MH	Marshall Islands	SR	Suriname
AW	Aruba	GF	French Guyana	MK	Macedonia	ST	Saint Tome and Principe
AZ	Azerbaijan	GH	Ghana	ML	Mali	SU	Former USSR
BA	Bosnia-Herzegovina	GI	Gibraltar	MM	Myanmar	SV	El Salvador
BB	Barbados	GL	Greenland	MN	Mongolia	SY	Syria
BD	Bangladesh	GM	Gambia	MO	Macau	SZ	Swaziland
BE	Belgium	GN	Guinea	MP	Northern Mariana Islands	TC	Turks and Caicos Islands
BF	Burkina Faso	GP	Guadeloupe (French)	MQ	Martinique (French)	TD	Chad
BG	Bulgaria	GQ	Equatorial Guinea	MR	Mauritania	TF	French Southern Territories
BH	Bahrain	GR	Greece	MS	Montserrat	TG	Togo
BI	Burundi	GS	S. Georgia & S. Sandwich Isls.	MT	Malta	TH	Thailand
BJ	Benin	GT	Guatemala	MU	Mauritius	TJ	Tadjikistan
BM	Bermuda	GU	Guam (USA)	MV	Maldives	TK	Tokelau
BN	Brunei Darussalam	GW	Guinea Bissau	MW	Malawi	TM	Turkmenistan
BO	Bolivia	GY	Guyana	MX	Mexico	TN	Tunisia
BR	Brazil	HK	Hong Kong	MY	Malaysia	TO	Tonga
BS	Bahamas	HM	Heard and McDonald Islands	MZ	Mozambique	TP	East Timor
BT	Bhutan	HN	Honduras	NA	Namibia	TR	Turkey
BV	Bouvet Island	HR	Croatia	NC	New Caledonia (French)	TT	Trinidad and Tobago
BW	Botswana	HT	Haiti	NE	Niger	TV	Tuvalu
BY	Belarus	HU	Hungary	NF	Norfolk Island	TW	Taiwan
BZ	Belize	ID	Indonesia	NG	Nigeria	TZ	Tanzania
CA	Canada	IE	Ireland	NI	Nicaragua	UA	Ukraine
CC	Cocos (Keeling) Islands	IL	Israel	NL	Netherlands	UG	Uganda
CF	Central African Republic	IN	India	NO	Norway	UK	United Kingdom
CG	Congo	IO	British Indian Ocean Territory	NP	Nepal	UM	USA Minor Outlying Islands
CH	Switzerland	IQ	Iraq	NR	Nauru	US	United States
CI	Ivory Coast	IR	Iran	NU	Niue	UY	Uruguay
CK	Cook Islands	IS	Iceland	NZ	New Zealand	UZ	Uzbekistan
CL	Chile	IT	Italy	OM	Oman	VA	Vatican City State
CM	Cameroon	JM	Jamaica	PA	Panama	VC	Saint Vincent & Grenadines
CN	China	JO	Jordan	PE	Peru	VE	Venezuela
CO	Colombia	KE	Kenya	PF	Polynesia (French)	VG	Virgin Islands (British)
CR	Costa Rica	KG	Kyrgyzstan	PG	Papua New Guinea	VI	Virgin Islands (USA)
CS	Former Czechoslovakia	KH	Cambodia	PH	Philippines	VN	Vietnam
CU	Cuba	KI	Kiribati	PK	Pakistan	VU	Vanuatu
CV	Cape Verde	KM	Comoros	PL	Poland	WF	Wallis and Futuna Islands
CX	Christmas Island	KN	Saint Kitts & Nevis Anguilla	PM	Saint Pierre and Miquelon	WS	Samoa
CY	Cyprus	KP	North Korea	PN	Pitcairn Island	YE	Yemen
CZ	Czech Republic	KR	South Korea	PR	Puerto Rico	YT	Mayotte
DE	Germany	KW	Kuwait	PT	Portugal	YU	Yugoslavia
DJ	Djibouti	KY	Cayman Islands	PW	Palau	ZA	South Africa
DK	Denmark	KZ	Kazakhstan	PY	Paraguay	ZM	Zambia
DM	Dominica	LA	Laos	QA	Qatar	ZR	Zaire
DO	Dominican Republic	LB	Lebanon	RE	Reunion (French)	ZW	Zimbabwe
DZ	Algeria			RO	Romania		
EC	Ecuador			RU	Russian Federation		
EE	Estonia			RW	Rwanda		
EG	Egypt			SA	Saudi Arabia		
EH	Western Sahara						



## Specification

### General

Power requirements	AC 110-240V , 50/60 Hz
Power consumption	14W
Dimensions (approx.)	360 X 69 X 245 mm (w/h/d)
Mass (approx.)	2.5 kg
Operating temperature	5°C to 40°C (41°F to 104°F)
Operating humidity	5 % to 90 %

### System

Laser	Semiconductor laser, wavelength 650 nm
Signal system	PAL/NTSC
Frequency response	DVD (PCM 96 kHz): 8 Hz to 44 kHz DVD (PCM 48 kHz): 8 Hz to 22 kHz CD: 8 Hz to 20 kHz
Signal-to-noise ratio	More than 100dB (ANALOG OUT connectors only)
Harmonic distortion	Less than 0.008%
Dynamic range	More than 100 dB (DVD) More than 95 dB (CD)

### Outputs

VIDEO OUT	1 Vp-p 75 ohms, sync negative
Audio output (digital audio)	0.5 V (p-p), 75 Ω, RCA jack x 1
Audio output (analog audio)	2.0 Vrms (1 KHz, 0 dB), 330 Ω, RCA jack (L, R) x 1/SCART(TO TV)

### Accessory

SCART cable .....	1
Remote control .....	1
Batteries .....	2

- Design and specifications are subject to change without notice.

Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic", and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works. Copyright 1992-1997 Dolby Laboratories. All rights reserved.

"DTS" and "DTS Digital Out" are trademarks of Digital Theater Systems, Inc.





Technology with the human touch

## GUARANTEE

- LG Electronics U.K. Ltd. will provide the following services in order to expedite this Guarantee.
- 1. All faulty components which fail due to defective manufacture will be replaced free of charge for a period of 12 months from the original date of purchase.
- 2. The dealer (or his service agent) who sold the product will be reimbursed for any labour provided in the repair of this LG equipment, for a period of 12 months from the original date of purchase. These claims must be made in accordance with the published scale of service charges and relevant claims procedure.

### PLEASE NOTE:

- A. The dealer may restrict the guarantee to the original purchaser.
- B. The dealer is not obliged to carry out service under guarantee if unauthorized modifications are made to the apparatus, or if non standard components are used or if the serial number of the apparatus is removed, defaced, misused, or altered.
- C. Any claims made under guarantee must be directed to the dealer from whom the equipment was originally purchased. The dealer may, before carrying out service under guarantee, require a receipted account as evidence of the date of purchase.
- D. We respectfully point out that your dealer is not obligated to replace batteries if they become exhausted or worn in use.
- E. Aerial alignment and consumer control adjustments are not covered by this guarantee.

This guarantee does not affect your statutory rights.

### ● REQUIREMENTS TO MAINTAIN WARRANTY COVERAGE:

RETAIN YOUR RECEIPT TO PROVE DATE OF PURCHASE. A COPY OF YOUR RECEIPT MUST BE SURRENDERED AT THE TIME GUARANTEE SERVICE IS PROVED.

- Product Registration Card : It is helpful to complete at least your name, address, phone, model & serial numbers and return it. This will enable LG to assist you in the future should you lose your receipt, your units be stolen, or should modifications be necessary.
- To obtain information or assistance: Call 01753 500470 Monday-Friday 9.00am-4.30pm

MODEL NO.*	SERIAL NO.*	DATE OF PURCHASE.*

\* Please complete for your own record

**In all cases of difficulty - consult your LG dealer  
from whom the product was purchased**